

## AIR VELOCITY TRANSMITTER 0-10VDC

EAV..

To measure the air velocity in HVAC ducts and provide a linear 0-10vdc output signal across the range. The unit operates on a thermal principle based on the cooling effect from the air speed.




Accuracy  $\pm 1\%$  at mid range at  $20^{\circ}\text{C}$   
 Response time  $< 2\text{s}$   
 Media Temp  $-10/+60^{\circ}\text{C}$   
 Media Humidity  $0/80\%RH$   
 Max Ambient  $-20/+60^{\circ}\text{C}$   
 Allow 15s for the unit to stabilise when it is first switched on.  
 Consumption 85mA  
 Enclosure Flammability = UL94-V0

Type	Mounting	Range m/s	Supply $\pm 15\%$	Output Signal	Load	Enclosure
<b>EAV-4</b>	Duct	0/4	24VAC/DC	0-10vdc	$>10\text{K}\Omega$	IP65
<b>EAV-8</b>	Duct	0/8	24VAC/DC	0-10vdc	$>10\text{K}\Omega$	IP65
<b>EAV-16</b>	Duct	0/16	24VAC/DC	0-10vdc	$>10\text{K}\Omega$	IP65

### DIMENSIONS:


EAV..

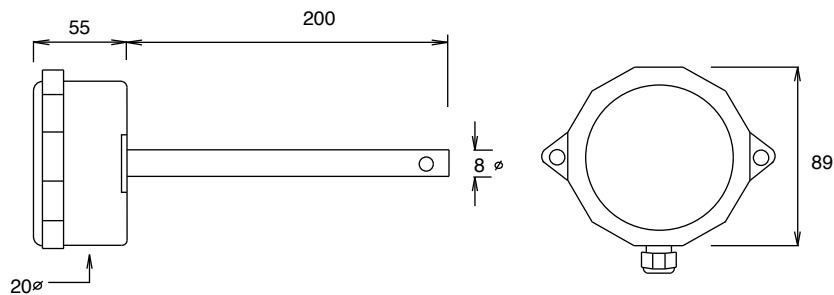

Ensure that the air flows directly through the holes in the side of the probe. The air can enter the holes from either side. Mount away from bends, elbows and turbulent areas. Avoid installing in areas where the temperature in the duct changes rapidly. DO NOT SUBJECT THE SENSING ELEMENT TO OILY, DIRTY, DUSTY OR MOIST MEDIA.

### WIRING:

EAV..

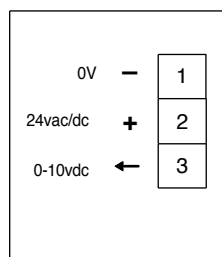

### INSTALLATION:

Terminals 0.5-2.5mm

Min sensor / control signal cable size 7/0.2mm

Max length 100m.

Screened cable is recommended.

The screen should be earthed at controller end only.

Keep sensor/control signal wires away from power cables/units which may cause interference.