

**WIND SPEED & DIRECTION SENSOR
0-10 VDC**


EWSD-10

<p>■ This product is suitable for measuring wind speed, wind direction or both. It can be used for automatic window closure in high wind conditions or general monitoring applications with BMS systems.</p> <p>The 0-10vdc output signal is linear for both wind speed & direction.</p>	 <p>EWSD-10</p>	<p>Max Ambient -20/+70°C</p> <p>A bracket is provided suitable for mounting onto a mast of diameter between 30 - 50mm.</p> <p>Flammability: Anodised aluminium alloy UPVC & Stainless Steel assembly with polypropylene cups.</p> <p>Electrical connection 25m 4-core screened cable supplied as standard. This can be extended up to 200m Max. Consumption 40mA Max.</p>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


Type	Application	Supply ±15%	Range	Output 2 x 0-10VDC	Start Speed Approx.	Typical Accuracy	Resolution	Protection
EWSD-10	Wind Speed	24VAC/DC	0 - 50 m/s	0 - 10VDC	<0.5 m/s	±5% or 1.5 m/s	< 0.5 m/s	IP65 Sensor
	Direction		0 - 360°	0V = 10° 5V = 180° (South) 10V = 360° (North)	<0.5 m/s	5° typical (10° worst)	< 1°	IP30 Control Box

Speed measurement - Hall Effect solid state magnetic switch activated by magnets in the cup rotor.

DIMENSIONS:

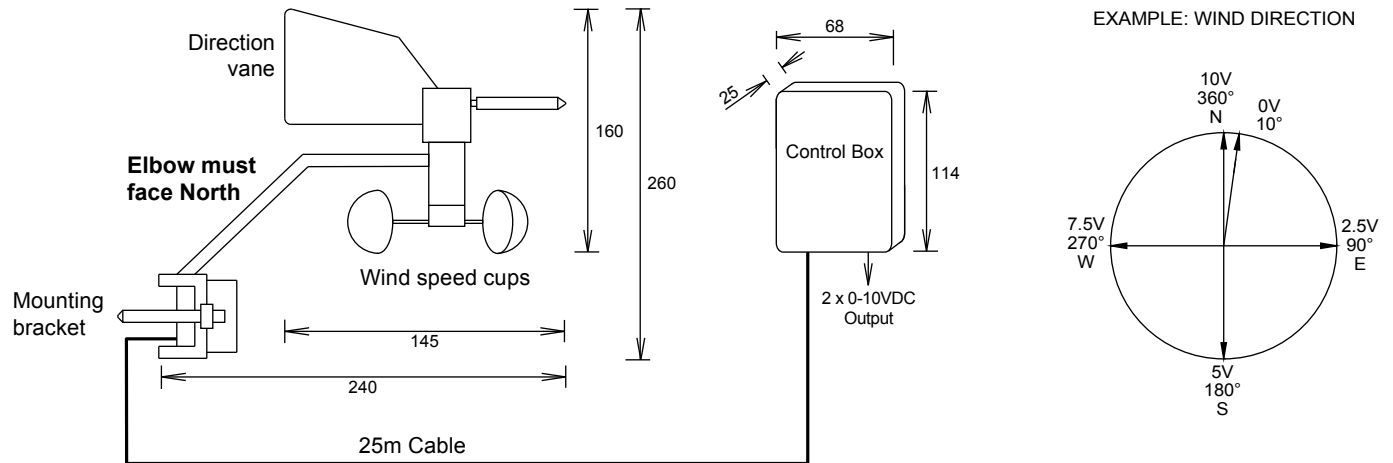

WIRING :

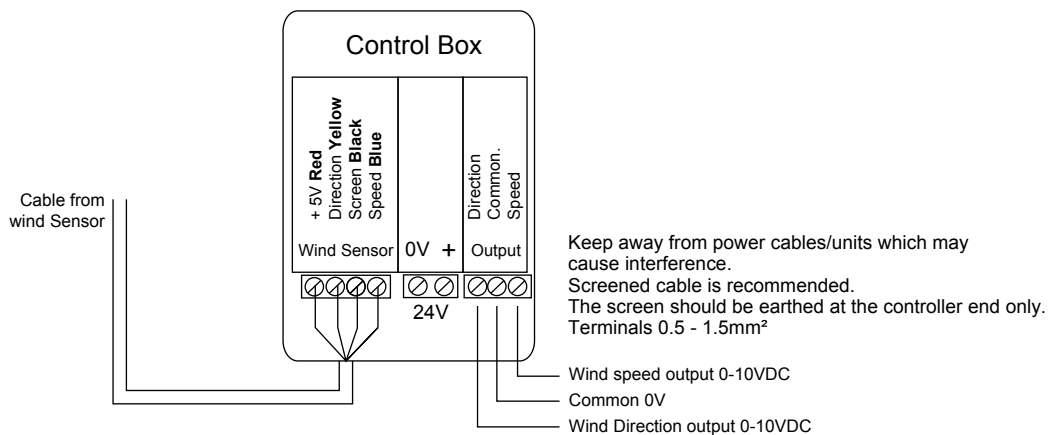

Supplied with the control box which converts the sensor signal to a standard 0-10 volt output signal.

INSTALLATION:

The unit should be mounted to a mast with a diameter of between 30-50 mm with the supplied V-shaped clamp and bracket. Situate the unit in a clear site which is most representative of the area to be monitored. Avoid extremes ie hilltops which may indicate increased wind speeds, or valleys and in close proximity to trees and buildings which may indicate decreased wind speeds due to shielding. Several sensor heads can be installed to give spatial coverage and thus achieving more precise results. Ensure the elbow points NORTH using a compass or gently rotate the vane until 0° or 357° is indicated on a suitable measuring instrument, as this will represent North. Fix and tighten the bracket at this position.